


V135

Diverting and Mixing Valve

PRODUCT DATA

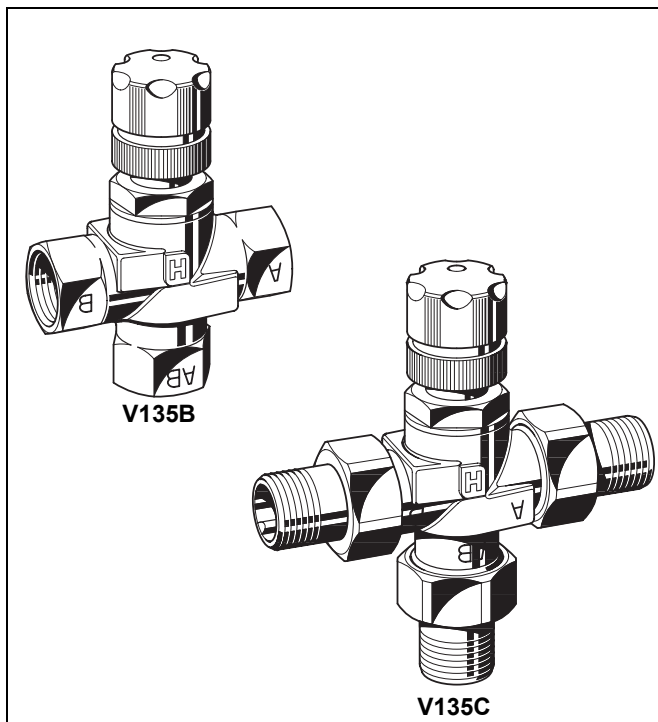

Design

The V135 consists of:

- Valve housing PN16 with internal or external threads
- Control insert
- Handwheel cap
- Union-nuts, threaded tailpieces and sealings (C type only)

Materials

- Valve housing made of red bronze
- Valve insert made of brass and plastic with EPDM O-rings and soft seals
- Handwheel cap made of white plastic
- Union-nuts and tailpieces made of brass

Application

The V135 is a three-way mixing or diverting valve for hot water heating systems. It is typically used with a T100R or T100RS thermostat for hot water control applications, e.g. temperature control of underfloor heating systems.

Features

- **Balanced valve insert for high differential pressure resistance**
- **Small stroke with high kv-value**
- **Robust red bronze valve housing**
- **Handwheel cap supplied with valve**
- **Upper spindle sealing can be replaced under system pressure**

Specifications

Medium	Water or water-glycol mixture, quality to VDI 2035
pH-value	8...9.5
Operating temperature	max. 120°C (248°F)
Operating pressure	max. 16bar (232psi)
Differential pressure with T100R thermostat	max. 10bar (145psi)
kv(cv)-value	see table on page 2
Flow	AB -> A or B A or B -> AB
Starting position	AB - A (B closed)
Stroke	2mm
Closing dimension	11.5mm
Actuator connection	M30 x 1.5

Suitable Actuators

- Honeywell T100R/RS thermostat for water and air
- Honeywell Smart-T thermal actuator

Function

As mixing valve on primary side (in connection with T100R/RS thermostat):

The thermostat sensor is attached to the supply pipeline of the secondary loop. The combination of V135 and T100R/RS acts as mixing valve and controls the amount of primary supply (port A) and return water (port B) to achieve the desired hot water temperature in the secondary supply loop.


As mixing valve on secondary side (in connection with T100R/RS thermostat):

The thermostat sensor is attached to the supply pipeline of the secondary loop. The combination of V135 and T100R/RS acts as mixing valve and controls the amount of secondary supply water (port A) mixed to the return water (port B) to achieve the desired hot water temperature in the secondary supply loop (port AB).


As diverting valve on primary side (in connection with T100R/RS thermostat):

The thermostat sensor is attached to the supply pipeline of the secondary loop. The combination of V135 and T100R/RS acts as diverting valve and diverts the primary supply (port AB) into the heat exchanger (port A) when the secondary supply temperature is below the set temperature of the T100R/RS thermostat. When the temperature is above the set temperature the primary supply is diverted through the bypass into the return (port B).

Dimensions

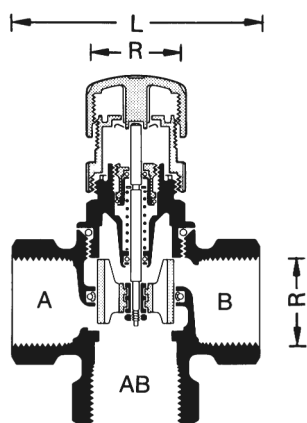

V135B

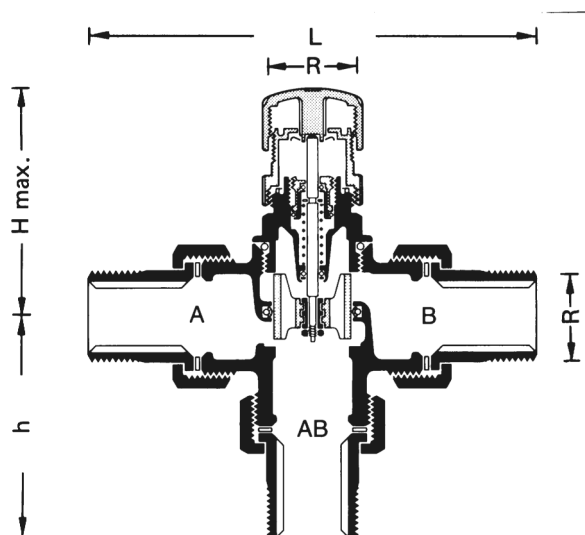

V135C

Size	k _{VS} (CV)-value	Dimensions B type				Dimensions C type				Weight kg
		R	H	h	L	R	H	h	L	
DN15	2,8	1/2"	82	40	80	1/2"	82	60	130	0,5
DN20	3,2	3/4"	82	40	80	3/4"	82	70	140	0,6
DN25	5	1"	82	45	90	1"	82	80	159	0,8
DN32	5	1 1/4"	82	50	100	1 1/4"	82	95	180	1,3


NOTE: All dimensions in mm unless stated otherwise.

Ordering Information

Order text	Size	Packing unit	OS-No.
V135 B type mixing and diverting valve with internal threads	DN15	1 pc	V135-1/2B
	DN20	1 pc	V135-3/4B
	DN25	1 pc	V135-1B
	DN32	1 pc	V135-1 1/4B
V135 C type mixing and diverting valve with external threads, union nuts and externally threaded tailpieces	DN15	1 pc	V135-1/2C
	DN20	1 pc	V135-3/4C
	DN25	1 pc	V135-1C
	DN32	1 pc	V135-1 1/4C

Accessories

Valve insert



V135A-1/2VE
V135A-1VE
V135A-11/2VE

Thermostat with remote sensor (screw-in sensor)



With R1/2" immersion pocket	T100R-AA
Setting range 10...50°C (50...122°F)	
With R1/2" immersion pocket	T100R-AB
Setting range 30...70°C (86...158°F)	
With R1/2" screw in sensor	T100RS-DA
Setting range 10...50°C (50...122°F)	
With R1/2" screw in sensor	T100RS-DB
Setting range 30...70°C (86...158°F)	

NOTE: For detailed information see T100R/RS data sheet.

Smart-T thermal actuator (on/off control only)




MT4...

NOTE: Please refer to MT4 data sheet for exact model number


Please Note:

- To avoid stone deposit and corrosion the composition of the medium should conform with VDI-Guideline 2035
- Additives have to be suitable for EPDM sealings
- System has to be flushed thoroughly before initial operation with all valves fully open
- Any complaints or costs resulting from non-compliance with above rules will not be accepted by Honeywell
- Please contact us if you should have any special requirements or needs


Installation Examples

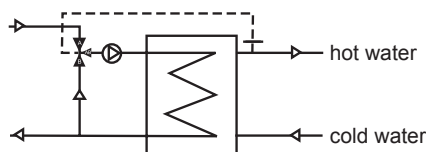

Mixing valve on primary side

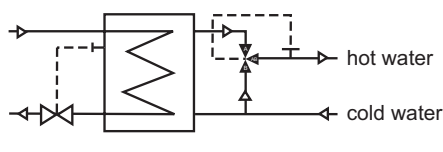


Mixing valve on secondary side

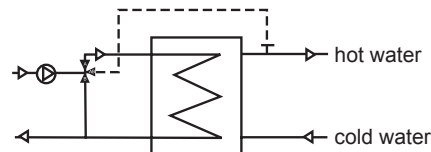


Diverting valve on primary side

Flow Diagram A - AB and B - AB

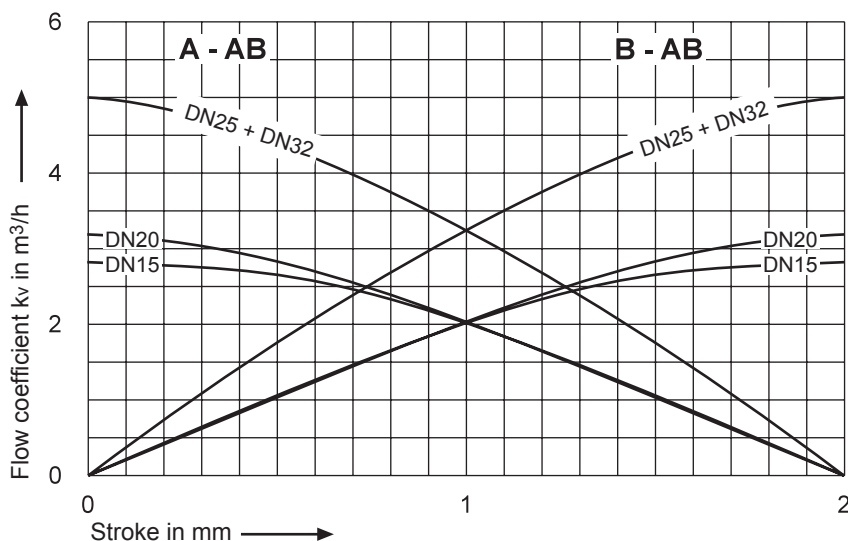

Flow Diagram

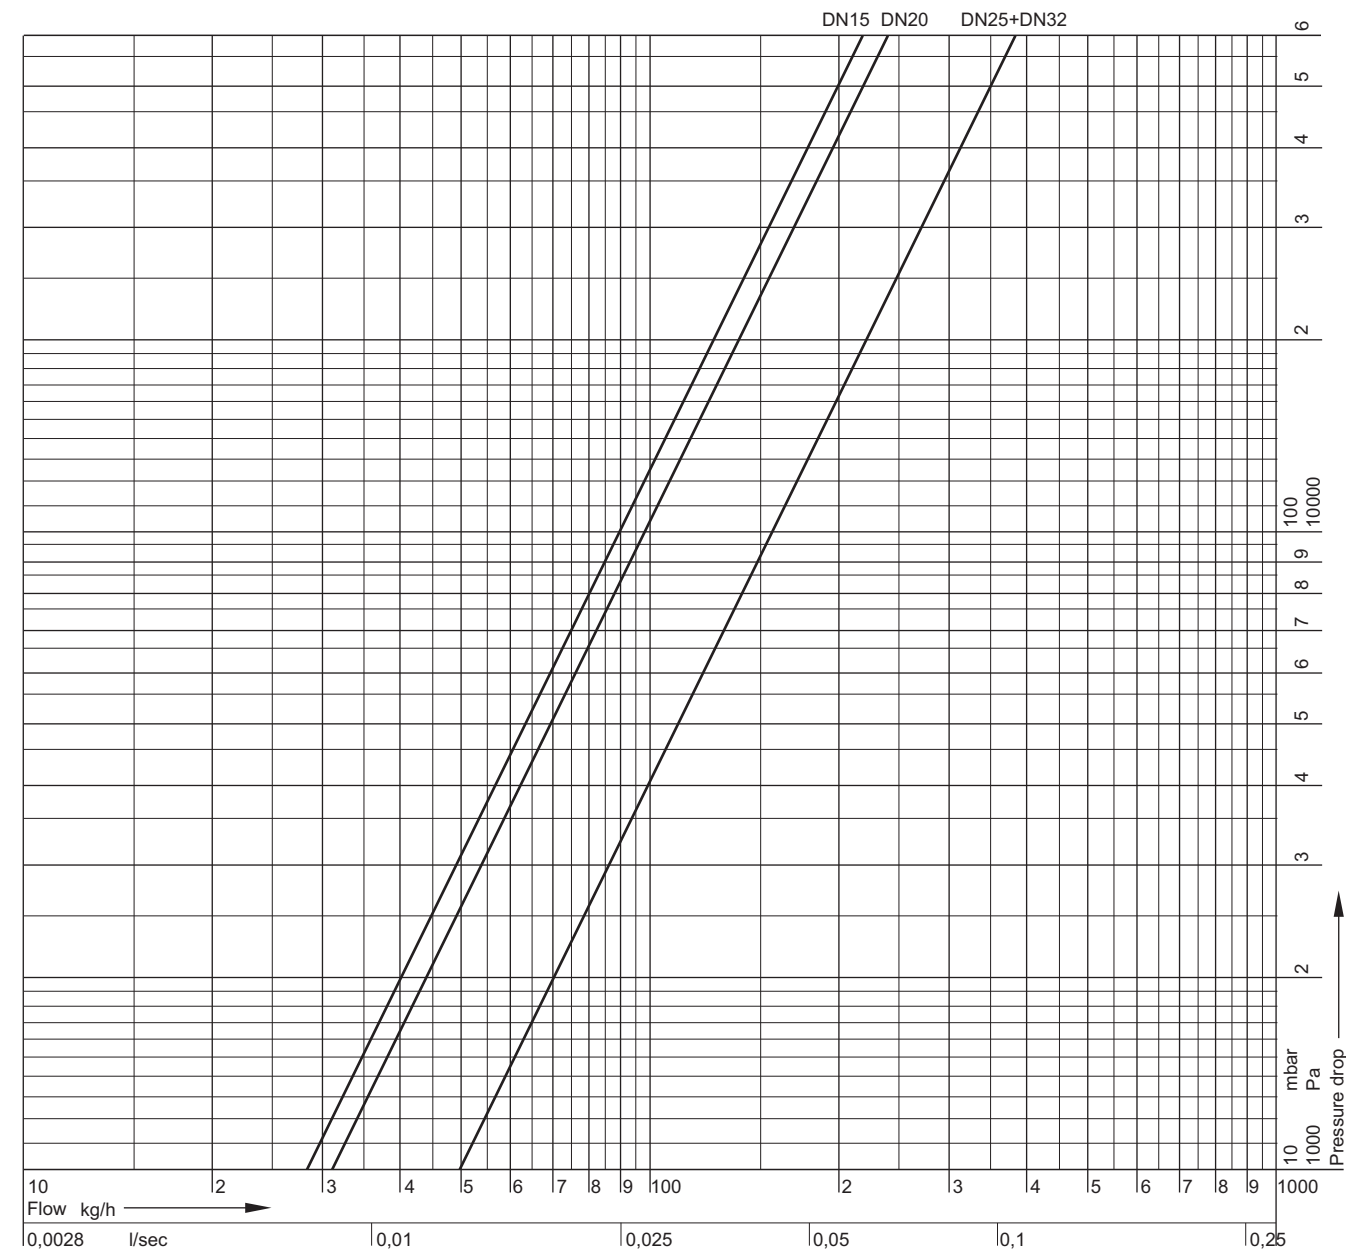

Environmental and Combustion Controls

Honeywell GmbH
Hardhofweg
74821 Mosbach, Germany
Phone: +49 (6261) 810
Fax: +49 (6261) 81393
www.honeywell.com

EN0H-2800GE25 R0110
January 2010
© 2010 Honeywell International Inc.
Subject to change without notice
Manufactured for and on behalf of the Environmental and Combustion
Controls Division of Honeywell Technologies Sàrl, Z.A. La Pièce 16,
1180 Rolle, Switzerland or its authorized representative.

